



256KZ

Random Access Memory

Instruction

Manual

Cromemco®
256KZ

Instruction Manual

CROMEMCO, Inc.
280 Bernardo Avenue
Mountain View, CA. 94043

Part No. 023-2021

October 1982

Copyright © 1982
CROMEMCO, Inc.
All Rights Reserved

This manual was produced using a Cromemco System Three computer with a Cromemco HDD-22 Hard Disk Storage System running under the Cromemco Cromix™ Operating System. The text was edited with the Cromemco Cromix Screen Editor. The edited text was proofread by the Cromemco SpellMaster™ Program and formatted by the Cromemco Word Processing System Formatter II. Camera-ready copy was printed on a Cromemco 3355B printer.

TABLE OF CONTENTS

| | |
|---|----|
| Chapter 1: INTRODUCTION | 1 |
| 68000 Based Systems | 1 |
| Z-80 Based Systems | 1 |
| Features | 2 |
| Chapter 2: USING THE 256KZ IN A Z-80 SYSTEM | 3 |
| Selecting a PROM | 3 |
| Switch Settings | 3 |
| Chapter 3: USING THE 256KZ IN A 68000 SYSTEM | 7 |
| Selecting a PROM | 7 |
| Switch Settings | 7 |
| Appendix A: LIMITED WARRANTY | 11 |

Cromemco 256KZ Memory Board
1. Introduction

FEATURES

The 256KZ automatically switches from contiguous memory when used with a DPU based 68000 Cromix system to bank selected memory in Z-80 Cromix systems. The switch settings on the board determine its address range in 68000 memory space. The PROM plugged into the IC39 socket determines the memory banks selected in Z-80 systems. This means that with Cromemco's dual processor D-series systems you can use either the Z-80 or 68000 Cromix Operating System interchangeably, without changing any settings on the 256KZ memory boards.

The 256KZ can be byte-addressed or word-addressed. During Z-80 memory operations eight bits of data are transferred at one time, while with 68000 memory operations, 16 bits of data are transferred at one time. In this way, there is no speed degradation when using the 256KZ with 68000 systems.

Chapter 2

USING THE 256KZ IN A Z-80 SYSTEM

SELECTING A PROM

Determination of the 64 Kbyte banks of memory which a board contains is made via a PROM, IC39. The 256KZ is shipped with a Cromemco 74947 PROM in this location. This PROM places memory banks zero through three in the 256KZ as required by a 3-user Z-80 Cromix system.


If two 256KZ boards are being used for a 6-user Z-80 Cromix system, the 74947 PROMs must be removed from **both** boards and new PROMs installed. Cromemco PROM number 74948 is installed in one board, placing memory banks zero through three in the 256KZ as required by a 6-user system. (This is the board with switch bit one ON, as explained below.) Cromemco PROM number 74949 is installed in the other board, placing memory banks four through six in this 256KZ as required by a 6-user system. (This is the board with switch bit one OFF, as explained below.) Refer to the illustration and table at the end of this chapter.

If no PROM is in the IC39 socket, the 256KZ will assume that it is operating in a 68000 based system and that its addresses are being set by the switches (refer to Chapter 3).

SWITCH SETTINGS

There is only one switch bit which affects the operation of a 256KZ board in a Z-80 based system. This is switch bit one (labeled POC*/RESET* in the illustration) which enables the bottom 32 Kbytes of the board when the system is first turned on or reset.

Cromemco 256KZ Memory Board
 2. Using the 256KZ in a Z-80 System

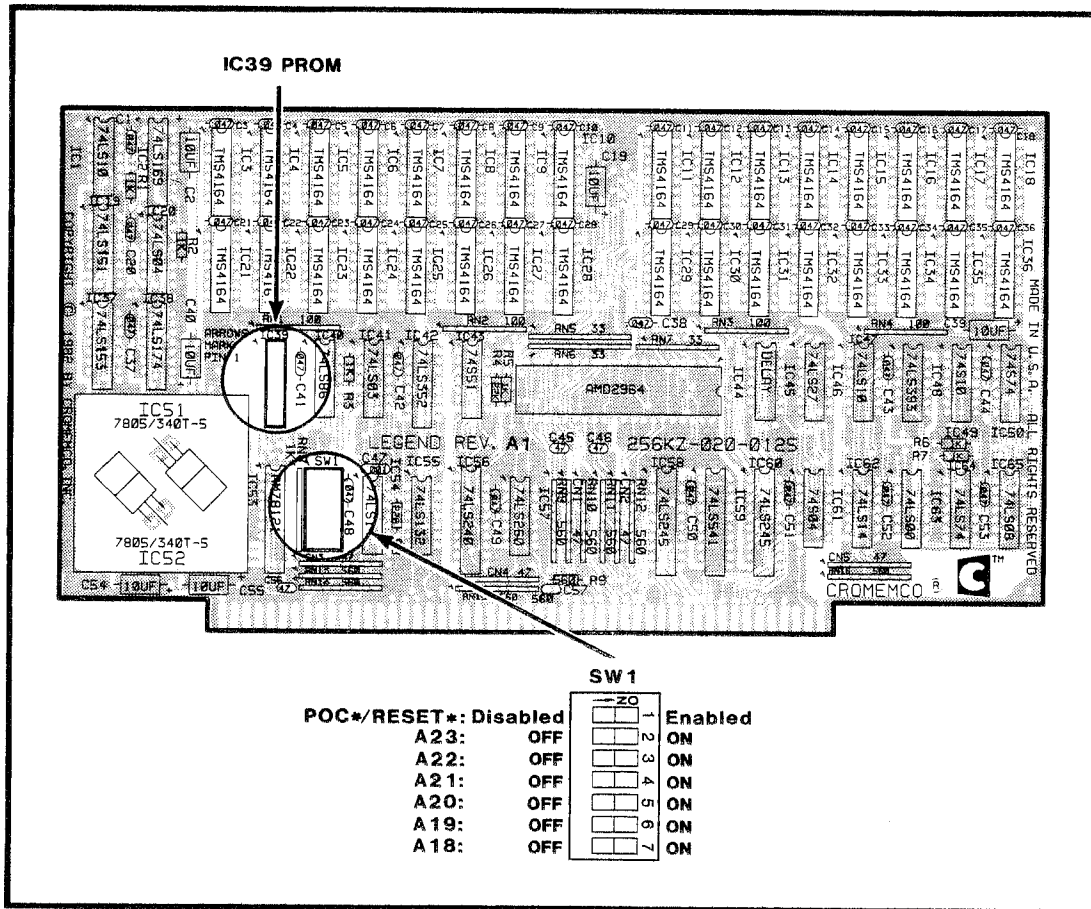

Switch bits two through seven are only significant in 68000 based Cromix systems.

Switch bit one must ON in systems using one 256KZ board.

In Z-80 based systems incorporating two 256KZ boards, one board contains memory banks zero through three while the other contains banks four through six. Switch bit one must be in the ON position on the board containing banks zero through three and OFF on the other board. Refer to the following table.

Cromemco 256KZ Memory Board
2. Using the 256KZ in a Z-80 System

| Cromix System | 256KZ #1 | 256KZ #2 |
|---------------|--|--|
| 3 user | switch bit 1 - ON PROM as shipped (74947) | not applicable |
| 6 user | switch bit 1 - ON change PROM to 74948 | switch bit 1 - OFF change PROM to 74949 |

Settings of other switches on the board are not relevant to Z-80 operation.

Chapter 3

USING THE 256KZ IN A 68000 SYSTEM

SELECTING A PROM

The IC39 PROM has no effect on the operation of a 256KZ board in a 68000 based system. If the 256KZ board is to be used with the Cromemco DPU board in both a Z-80 and 68000 environments, a PROM accommodating the needs of the Z-80 portion of the DPU should be used. Refer to Chapter 2 for a description of the 256KZ in a Z-80 environment.

SWITCH SETTINGS

When switch bit one (labeled POC*/RESET* in the illustration) is on, it enables the bottom 32 Kbytes of the board when the system is first turned on or reset. Switch bit one must be in the ON position on the 256KZ board addressed as the lowest area of memory. It must be OFF on all other 256KZ boards in the system.


Switch bits two through seven are used to select the upper six address bits for 68000 operation. Refer to the following illustration.

The first (or only) 256KZ board in any 68000 based system should have switch bits two through seven ON. (This is the board with switch bit one ON, as explained above.) This causes the board to be addressed starting at location zero. It must also have the standard PROM (74947) in the IC39 socket. This enables memory to be accessed by the DPU during start-up procedures.

The second 256KZ board in the system should have switch bit seven OFF and bits two through six ON. (This and all subsequent boards should have switch bit one OFF, as explained above.) The second and subsequent boards in

Cromemco 256KZ Memory Board
 3. Using the 256KZ in a 68000 System

the system do not require a PROM. If there is no PROM in the IC39 socket, the 256KZ will assume that it is in a 68000 based system.

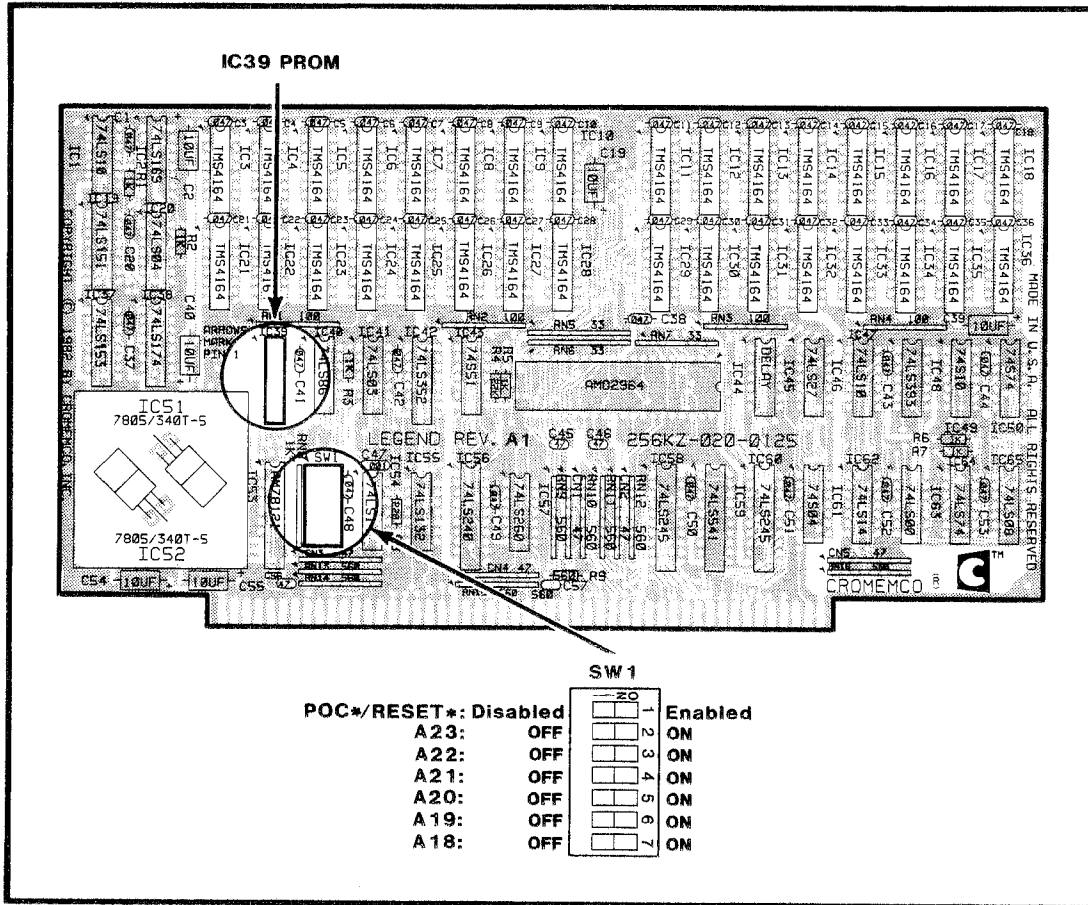

For switch settings in systems with more than two 256KZ boards, consult the following table.

Cromemco 256KZ Memory Board
 3. Using the 256KZ in a 68000 System

| First Memory Address | | Switch Bit | | | | | |
|----------------------|-------------|------------|-----|-----|-----|-----|-----|
| Hexadecimal (0000) | Decimal (K) | 2 | 3 | 4 | 5 | 6 | 7 |
| 00 | 0 | ON | ON | ON | ON | ON | ON |
| 04 | 256 | ON | ON | ON | ON | ON | OFF |
| 08 | 512 | ON | ON | ON | ON | OFF | ON |
| 0C | 1024 | ON | ON | ON | ON | OFF | OFF |
| 10 | 1280 | ON | ON | ON | OFF | ON | ON |
| 14 | 1536 | ON | ON | ON | OFF | ON | OFF |
| . | . | | | . | | | |
| . | . | | | . | | | |
| . | . | | | . | | | |
| F4 | 15616 | OFF | OFF | OFF | OFF | ON | OFF |
| F8 | 15872 | OFF | OFF | OFF | OFF | OFF | ON |
| FC | 16128 | OFF | OFF | OFF | OFF | OFF | OFF |

Cromemco 256KZ Memory Board

A. Limited Warranty

Appendix A

LIMITED WARRANTY

Cromemco, Inc. ("Cromemco") warrants this product against defects in material and workmanship to the original purchaser for ninety (90) days from the date of purchase, subject to the following terms and conditions.

What Is Covered By This Warranty:

During the ninety (90) day warranty period Cromemco will, at its option, repair or replace this Cromemco product or repair or replace with new or used parts any parts or components, manufactured by Cromemco, which prove to be defective, provided the product is returned to an Authorized Cromemco Dealer as set forth below.

How To Obtain Warranty Service:

You should immediately notify IN WRITING your Authorized Cromemco Dealer or Cromemco of problems encountered during the warranty period. In order to obtain warranty service, first obtain a return authorization number by contacting the Authorized Cromemco Dealer from whom you purchased the product. Then attach to the product:

1. Your name, address and telephone number,
2. the return authorization number,
3. a description of the problem, and
4. proof of the date of retail purchase.

Ship or otherwise return the product, transportation and insurance costs prepaid, to the Authorized Cromemco Dealer. If you are unable to receive warranty repair from the Authorized Cromemco Dealer from whom you purchased the product, you should contact Cromemco Customer Support at: Cromemco, Inc., 280 Bernardo Ave., Mountain View, Ca. 94043.

What Is Not Covered By This Warranty:

Cromemco does not warrant any products, components or parts not manufactured by Cromemco.

This warranty does not apply if the product has been damaged by accident, abuse, misuse, modification or misapplication; by damage during shipment; or by improper service. This product is not warranted to operate satisfactorily with peripherals or products not manufactured by Cromemco. Transportation and insurance charges incurred in transporting the product to and from the Authorized Cromemco Dealer or Cromemco are not covered by this Warranty.

Exclusion of Liability, Damages, and Other Warranties:

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO NINETY (90) DAYS FROM THE DATE OF PURCHASE OF THIS PRODUCT. IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER AS WARRANTED ABOVE, YOUR SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. CROMEMCO SHALL NOT BE LIABLE FOR INCIDENTAL AND/OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING DAMAGE TO PROPERTY AND, TO THE EXTENT PERMITTED BY LAW, DAMAGES FOR PERSONAL INJURY, EVEN IF CROMEMCO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE AGENTS, DEALERS, AND EMPLOYEES OF CROMEMCO ARE NOT AUTHORIZED TO MAKE MODIFICATIONS TO THIS WARRANTY, OR ADDITIONAL WARRANTIES BINDING ON CROMEMCO ABOUT OR FOR PRODUCTS SOLD OR LICENSED BY CROMEMCO. ACCORDINGLY, ADDITIONAL STATEMENTS WHETHER ORAL OR WRITTEN EXCEPT SIGNED WRITTEN STATEMENTS FROM AN OFFICER OF CROMEMCO DO NOT CONSTITUTE WARRANTIES AND SHOULD NOT BE RELIED UPON. SOFTWARE, TECHNICAL INFORMATION AND FIRMWARE ARE LICENSED ONLY BY A SEPARATE AGREEMENT ON AN "AS IS" BASIS.

Limitation on Statute of Limitation and Transferability:

This warranty and the statute of limitations shall run concurrently with any acceptance period. This warranty is not transferable. No suit, litigation, or action shall be brought based on the alleged breach of this warranty or implied warranties more than one year after the date of purchase in those jurisdictions allowing such a limitation, otherwise no such action shall be brought more than one year after the expiration of this warranty.

Other Important Provisions:

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitation or exclusion may not apply to you. This warranty shall not be applicable to the extent that any provision of this warranty is prohibited by any federal, state or municipal law which cannot be preempted. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

7/82



CromemcoTM
i n c o r p o r a t e d
Tomorrow's Computers Today
280 BERNARDO AVE., MOUNTAIN VIEW, CA 94043